


luisi

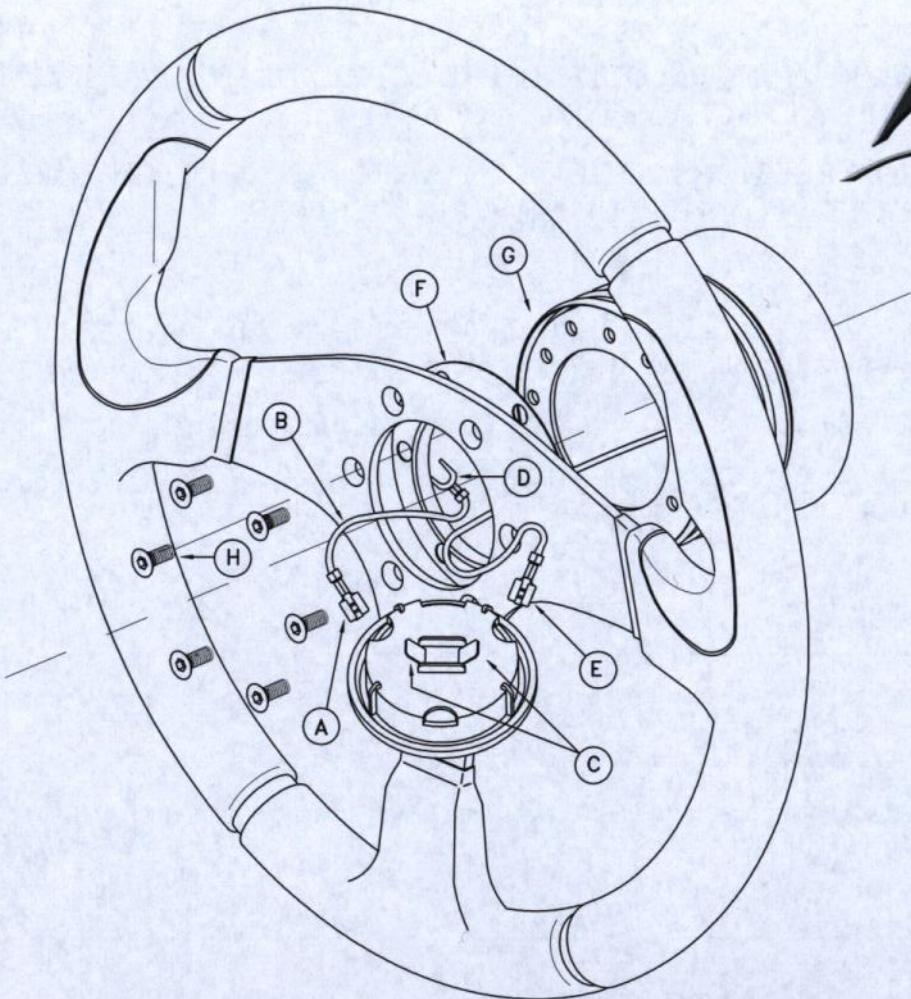

ISTRUZIONI PER OTTENERE IL CORRETTO MONTAGGIO DEL
PULSANTE CLACSON SUI VOLANTI LUISI.

INSTRUCTIONS TO GET A CORRECT FITTING OF THE HORN
BUTTON ON THE LUISI STEERING WHEELS.

(I)

- 1 - INSERIRE IL FASTON (A) DEL FILO (B) IN UNA DELLE DUE LINGUETTE (C) .
- 2 - INSERIRE L' ANELLO (D) DEL FILO (B) TRA IL MOZZO (G) E LA GHIERA (F) BLOCCANDOLO CON UNA DELLE VITI (H) CHE FISSANO IL VOLANTE.
- 3 - INSERIRE IL FASTON (E) , CHE PROVIENE DAL MOZZO, NELL'ALTRA LINGUETTA (C) .

NOTA: NELLE AUTO IN CUI SONO GIA' PREDISPOSTI I DUE FILI PER IL COLLEGAMENTO, CONNETTERLI
INDIFFERENTEMENTE ALLE LINGUETTE (C) ED ELIMINARE IL FILO (B) .

(E)

- 1 - INSERT THE FASTON (A) OF THE WIRE (B) INTO ONE OF THE TWO PLUGS (C) .
- 2 - INSERT THE RING (D) OF THE WIRE (B) BETWEEN THE HUB (G) AND THE METAL RING (F) , FIXING IT WITH ONE OF THE STEERING WHEEL SCREWS (H) .
- 3 - INSERT THE HUB CONTACT (E) INTO THE OTHER PLUG (C) .

NOTE: IN VEHICLES WHERE THE TWO CONNECTION WIRES ARE ALREADY PRESET, FIX THEM TO THE PLUGS (C)
AND REMOVE WIRE (B) .